


# DYNASYS™ CCU QUICK OPERATIONS GUIDE

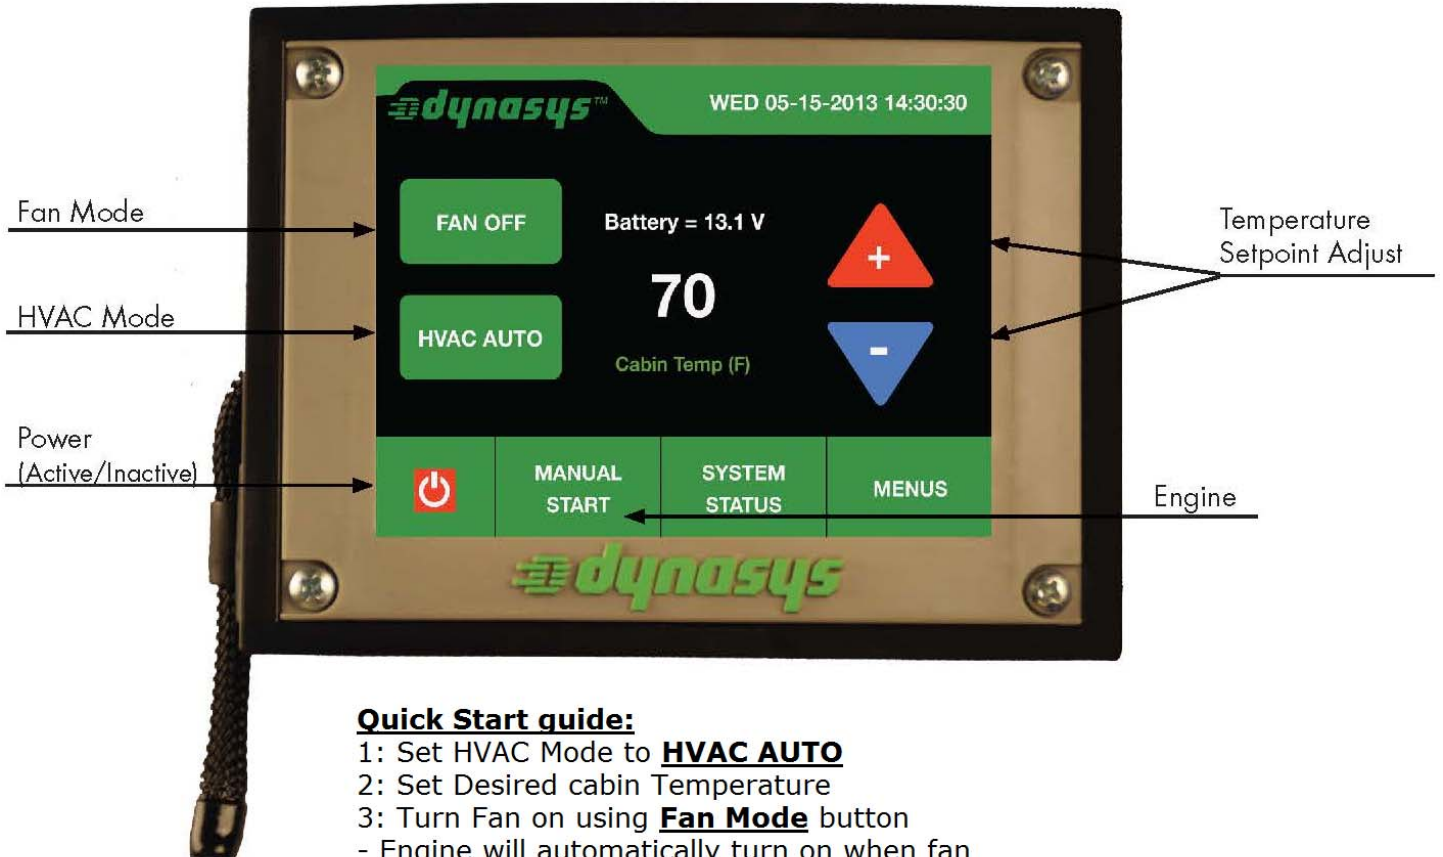

## **Quick Start guide:**

- 1: Set HVAC Mode to **HVAC AUTO**
- 2: Set Desired cabin Temperature
- 3: Turn Fan on using **Fan Mode** button
  - Engine will automatically turn on when fan speed is selected. Engine will remain running until user changes the Fan Mod to **FAN OFF**.

## **To operate system in Auto Mode:**

- 1: Set fan mode to **Fan Auto**
- 2: Set HVAC mode to **HVAC Auto**
- 3: Set Desired Cabin Temperature
  - Engine will start and stop automatically based on the desired cabin setpoints. System will automatically heat or cool depending on cabin setpoints

**For further information regarding the CCU and apu operation, refer to the CCU manual supplied with the APU system**